

## 1 WHAT'S IN THE BOX

Your Sound Trigger Glove kit includes everything you need to get started. Check that you have all the following items before proceeding.



### SOUND GLOVE UNIT

Includes the 8-button controller board, connecting cable, and sound processor case. The SD Card is pre-loaded with your character sounds and already installed in the device — ready to play out of the box.



### USB BATTERY CASE

Included if ordered as an extra



### USB-C CABLE

Included if ordered as an extra



### 3.5MM AUDIO CABLE

Included if ordered as an extra



### AMPLIFIED SPEAKER — NOT INCLUDED

Must be purchased separately. Search for "tour guide speakers" — the VoiceBooster series works great. Any powered speaker with a 3.5mm input will work.

## 2 DEVICE COMPONENTS

The sound glove system is made of 3 connected parts that work together:

### ① BUTTON CONTROLLER BOARD

The flexible glove portion worn on your hand. Contains all 8 trigger buttons.

### ② CONNECTING CABLE

Links the glove to the sound processor. Runs discreetly through or under your costume sleeve.

### ③ SOUND PROCESSOR CASE

The main unit. Handles SD card playback, audio output, and all configuration settings.



### ⚡ POWER NOTE

The device runs on 5V USB power. Many large power banks may auto-shutoff due to low draw. We recommend our battery case with 3 AA batteries for reliable operation.

### RECOMMENDED SPEAKER

We don't stock speakers, but the VoiceBooster series has worked exceptionally well. Search for [TOUR GUIDE SPEAKERS](#) for compatible options. Any powered speaker with a 3.5mm input will work.

### 3 FIRST-TIME STARTUP

Follow these steps the first time you power on your device. This covers physical setup through your first button press.

#### SD CARD ALREADY INSTALLED

Your device ships with the SD Card pre-installed in the sound processor. It contains all your included character sounds and is ready to play — no setup needed.

1

#### CONNECT POWER

Plug the USB end of your power cable into your power supply, then connect the USB-C end (the smaller, rectangular port) into the power input on the processor case.

 USB-C = rectangular port · Audio = round port

2

#### CONNECT AUDIO OUTPUT

Plug your 3.5mm audio cable into the round port on the processor case, then connect the other end to your amplified speaker. Keep the volume low for now.

3

#### WAIT FOR STARTUP CHIME

The device takes a moment to initialize. You may hear brief audio clips as it scans available sounds — this is *completely normal*.

 Startup chime = device is ready for configuration

4

#### CONFIGURATION MODE — SELECT YOUR HAND

After the chime, the device enters **Configuration Mode**. Press **Button 1** to switch between left-hand and right-hand mode. Press it again to switch back. An audio announcement will confirm which mode is currently active.

5

#### EXIT CONFIGURATION MODE


When you're happy with your hand selection, you have two options to exit: press and hold **Button 8** for **2 seconds** to confirm immediately, or simply wait **10 seconds** without pressing anything and the device will exit automatically.

 Either method plays a chime to confirm exit

6

#### READY TO USE!

Once configuration completes, the device enters **Performance Mode**. You're now ready to trigger character voices during your cosplay performance.

 All 8 buttons are now active

#### NOTE

There is no physical power switch. To power off, simply disconnect the USB-C cable or turn off the battery case. To run through Configuration Mode again, power the device fully off and back on.

## 4 EXTENDED "CONVERSATION" MODE

Extended Mode gives you access to up to 7 sound categories, each with its own dedicated set of 7 sounds on buttons 1–7. This lets you quickly switch between entirely different collections of phrases or effects mid-performance.

### HOW IT WORKS

Press and hold **Button 8** for 1–2 seconds to enter the Extended Mode menu. You'll hear a soft click confirming you're in the menu. The device is now waiting for you to choose a category.

#### SELECT A CATEGORY

Press any button **1 through 7** to silently select that category. Each category number corresponds to a different group of sounds. Once selected, buttons 1–7 will each play one dedicated sound from that category.

#### EXITING EXTENDED MODE

**Long press Button 8** again to exit. You'll hear the same click and you're back in standard Performance Mode.

#### VOICE GUIDE

See your device's **Voice Guide** for a complete listing of the conversation clips included for your character and which category and button each clip is assigned to.

### STEP-BY-STEP

1

In Performance Mode, long press Button 8

2

Hear a click — you're now in the category menu

3

Press Button 1–7 to choose a sound category

4

Buttons 1–7 now trigger that category's sounds

5

Long press Button 8 to exit — hear click

6

Back to standard Performance Mode

#### PRO TIP

Don't want the click sound? It can be disabled by removing a special file from the SD card. See the full documentation at [cosplayerfx.com/documentation](https://cosplayerfx.com/documentation)

## 5 CUSTOMIZING YOUR SOUNDS

The SD Card holds all your sound files. You can add, remove, or reorder them by editing the files directly using any computer. Simply remove the SD card, connect it to your computer, and arrange audio files in the order you want them to play.

Full documentation on customizing sounds, file naming conventions, and creating custom slots is available at:

[cosplayerfx.com/documentation](https://cosplayerfx.com/documentation)

## 6 WANT CUSTOM SOUNDS?

We create custom character voice packs made just for you. Whether you need a specific character, language, or phrase set, we can build it.

### GET IN TOUCH

✉ [support@cosplayerfx.com](mailto:support@cosplayerfx.com)

🛒 [cosplayerfx.etsy.com](https://cosplayerfx.etsy.com)

🌐 [cosplayerfx.com](https://cosplayerfx.com)



@cosplayerfx



CosplayerFx



@cosplayerfx